

编号 RFL-P70Q~P100Q

密级

阶段标记

页数 9

名称 RFL-P70Q~P100Q

脉冲光纤激光器英文使用说明书

会签

单位 第二事业部

编写 李科

校对 朱军

审核 施建宏

标审 李其军

批准 黄保

武汉锐科光纤激光技术股份有限公司

Ytterbium Pulsed Fiber Laser

User's Guide

RFL-P70Q~P100Q

Safety Information

Please read this instruction carefully and familiarize yourself with the information we have provided before you use the product. In this brochure, important operation procedures, safety and other information are provided for you and all future users. In order to ensure operating safely and optimal performance of the product, please do according to following warnings, cautions and other information.

- Raycus pulsed fiber laser is classified as a high power Class IV laser device. Before supplying the power to the device, please make sure that the correct voltage of 24VDC power source is connected and the anode and cathode are right. Failure to connect power source correctly will cause damage to the device.
- The device emits invisible 1060~1085nm wavelength light with average power 70W~100W. Do not expose your eyes or skin to the radiation of the laser.
- Do not take apart the device, because there are no replaceable accessories available for users to use. Any maintenance can only be proceeded in Raycus.
- Do not look into the light output end directly. Use appropriate laser safety eyewear when operating the device.

Safety labels and locations



Be careful
Avoid direct laser irradiation

The two labels above are located on the top of the cover of the device, representing laser radicalization.

Content

1. Description.....	1
1.1. Product description	1
1.2. Actual configuration list	1
1.3. Environmental requirements and cautions.....	1
1.4. Specifications.....	2
2. Mounting.....	3
2.1 Mounting dimensions	3
2.2 Method of installation.....	3
3. Control Interface.....	5
4. Operation Regulations.....	8
4.1 Pre-inspection	8
4.2 Operation procedures.....	8
4.3 Cautions	8
5. Instructions for warranty, return and maintenance	9
5.1 General warranty	9
5.2 Limitations of warranty	9
5.3 Service and repairs.....	9

1. Description

1.1. Product description

Raycus pulsed laser is an ideal high power laser source with high speed and high efficiency. It is specially designed for industrial laser making system and other applications.

Compared with traditional lasers, pulsed laser has some unique advantages in increasing the conversion efficiency of the pump light 10 times higher. Its low power consumption and automotive design make it appropriate for operating both in and outside the lab. Besides, it is exquisite and convenient for its independence in placement, free time in using and facility in connecting to equipment directly.

The device can emit 1060~1085nm wavelength pulsed light under the control of industrial laser's standard interface driven by 24VDC power source.

1.2. Actual configuration list

Table 1. Configuration list

Items	Quantity	Remark
Fiber Laser module	1	

1.3. Environmental requirements and cautions

Pulsed laser should be driven by 24VDC \pm 1V power source.

- 1) Caution: Make sure the corresponding wires of the device are properly grounded.
- 2) All the maintenance to the device should only be done by Raycus, because there is no replacement or accessory provided with the device. Please do not try to damage the labels or open the cover in order to prevent against electric shock, or the warranty will be invalid.
- 3) The output head of the product is connected with an optical cable. Please be careful handling the output head. Avoid dirt and any other contaminations. Please use the specialized lens paper when cleaning the lens. Please lid the laser with protective cover of the light isolator to be against dirt only when the laser is not installed in the device or not in working.
- 4) If the operating the device fails to follow this instruction, the protective function will be weakened. Therefore, it should be used under normal conditions.
- 5) Do not install the collimating device into the output head when the laser device is in working.

- 6) The device has four cooling fans at the rear panel to dissipate heat. In order to guarantee enough airflow to help giving heat off, there must be a space of at least 10 cm's width for airflow in front and rear side of the device. As the cooling fans are working at blow condition, if laser is mounted in a cabinet with fans, the direction should be same as laser's fans.
- 7) Do not look into the output head of the device directly. Please do wear appropriate laser safety eyewear during the time when operating the device.
- 8) Make sure the pulse repetition rate higher than 20 kHz.
- 9) For the longest time without pulse is only 100 us. If there is no pulse output, please stop marking at once, to avoid further damage of the device.
- 10) Power source sudden interruption will do great harm to the laser device. Please make sure the power supply works continuously.

1.4. Specifications

Table 2. 70Q/100Q pulsed fiber laser specifications

Pulsed fiber laser	70Q	100Q
Wavelength (nm)	1060~1085	1060~1085
Polarization	Random	Random
Optical isolator	Yes	Yes
Nominal average output power (W)	$\geq 70@70\sim 100\text{kHz}$	$\geq 100@100\sim 200\text{kHz}$
Single pulse energy (mJ)	1@20~70kHz	1@20~100kHz
Beam quality (M^2)	≤ 1.6	≤ 1.6
Beam Diameter (mm)	6~8	6~8
Pulse duration (ns)	50~130@70kHz	50~130@100kHz
Pulse repetition rate (KHz)	20 - 100	20 - 200
Output Power Tunability (%)	10-100	10-100
Output Fiber Cable length (m)	2.0	2.0
Working voltage (VDC)	24±1	24±1
Power consumption (20°C) (W)	400	450
Cooling	Forced Air Cooled	Forced Air Cooled
Dimension W×D×H (mm)	396×360×123	396×360×123
Operating temperature	0°C~40°C	0°C~40°C
Store temperature	-20°C~60°C	-20°C~60°C
humidity	<80%	<80%

2. Mounting

2.1 Mounting dimensions

1) Fiber Laser module dimensions (As shown in Fig. 1).

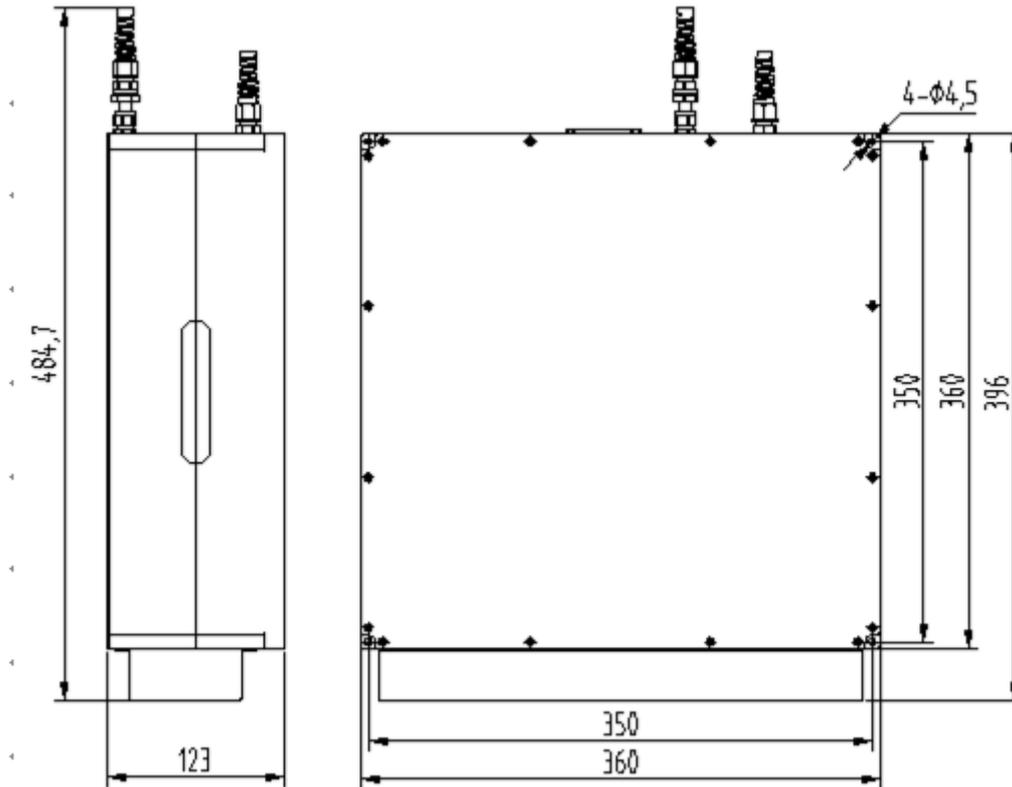


Figure 1. Dimension drawing of laser module (Unit: mm).

2) Isolated output head dimensions (As shown in Fig. 2).

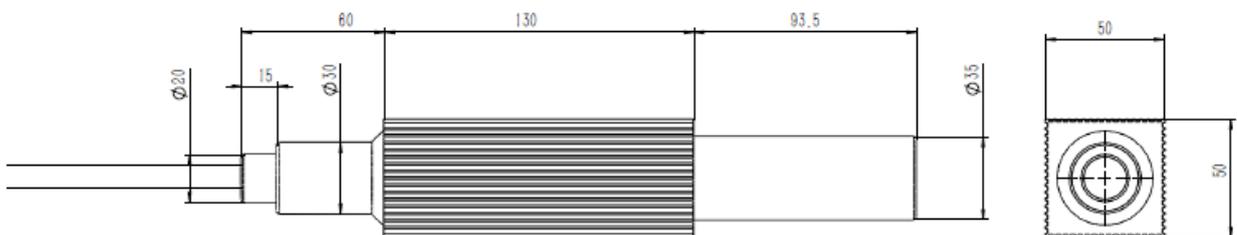


Figure 2. Dimension drawing of output isolator (Unit: mm).

2.2 Method of installation

- 1) Fix the module stable to the bracket and keep the laser in good ventilation.
- 2) Connect the power line to 24VDC power and ensure enough DC output power. Keep it clear to the polarity of the electric current: anode-brown; cathode-blue; PE-yellow and green. The

definition figure is shown in Fig. 3.

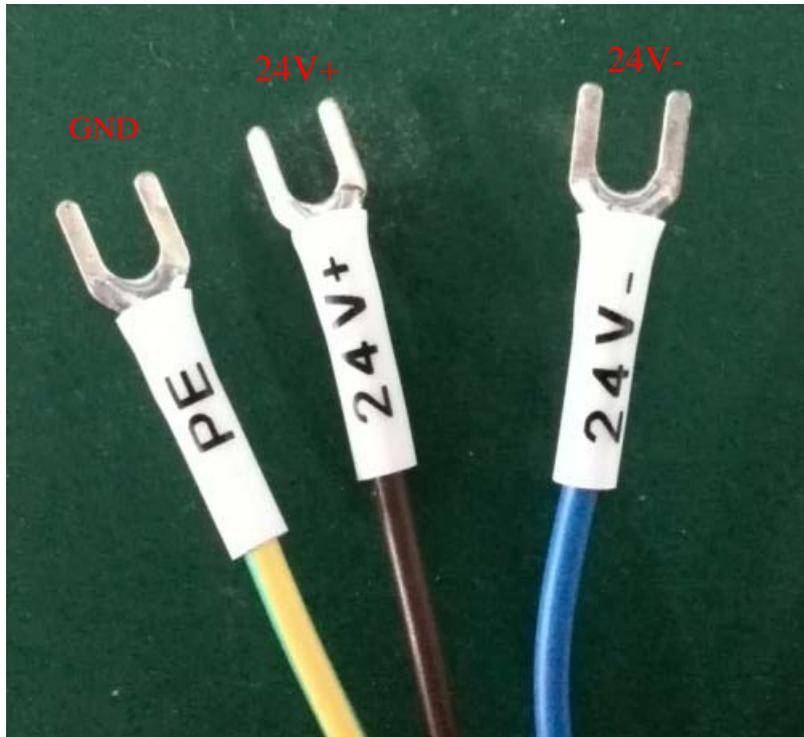


Figure 3. Definition of power line wires

- 3) Make sure that the interface of the external controller matches the laser and the control cable is well connected to the laser's interface. The recommended electrical connection is shown in Fig. 4.

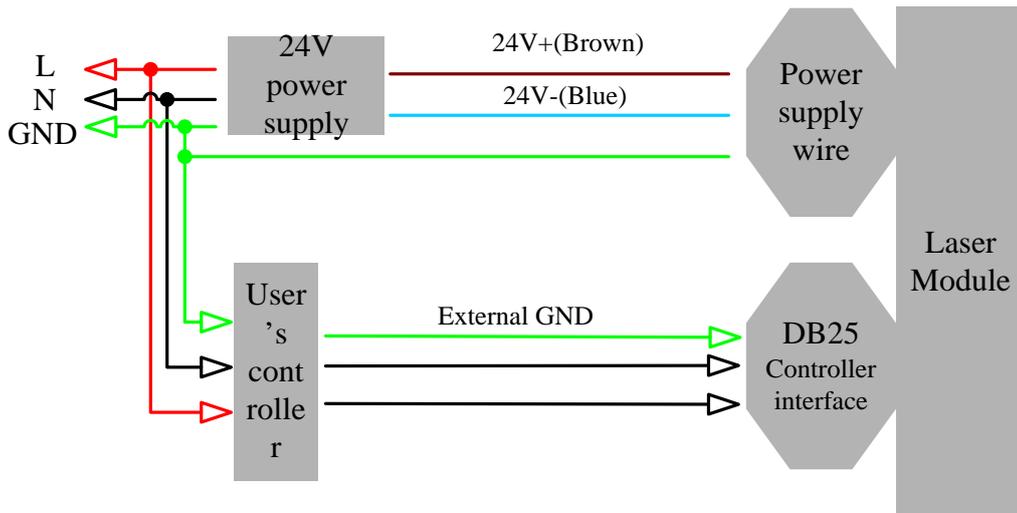


Figure 4. Schematic of recommended electrical connection

- 4) The bending radius of the delivery fiber should not exceed 15 cm.

3. Control Interface

There are DB9 and DB25 interfaces at the rear of the laser. The DB9 is a RS232 interface only used for debugging, no needs to connect. And DB25 is the joint interface connecting control system with laser system, please make sure the connection is reliable before operation. Feet of the DB25 are defined as follows in Fig. 5.

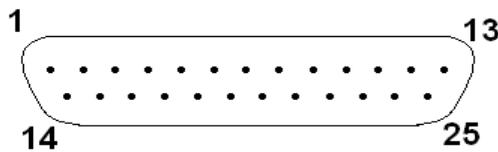


Figure 5. Connect port of controller

Table 3 Definition of connect ports of controller

PIN No.	Name	Description
1-8 (D0-D7)	Power Setting	8 bit Parallel port; D0 is minimum bit and D7 is maximum bit; Range: 0-255 (hexadecimal: 0X00-0XFF)
10,13-15,24-25	Ground	Digital GND
11,12,16,21	Laser alarms status	See alarm codes in table 5
17	VCC	+5VDC power supply input for independent operation of the guide laser and PCB
18	EE	Emission Enable (EE) signal. HIGH (>3V): Emission Enable LOW or disconnected (<1V): Emission Disable
19	EM	Emission Modulation (EM) input. HIGH (>3V): Emission ON LOW or disconnected (<1V): Emission OFF
20	Sync	Pulse Repetition Rate (Synchronization) input, square wave. (70-100kHz)/(20-200kHz)
22	Guide Laser signal	Guide Laser (red diode) ON/OFF input.
9,23	Obligate PIN	Reserved

- 1) The pump current of diode laser and the laser output power are controlled by setting the value of PIN1-PIN8 (TTL level). PIN1-PIN8 can be set from 0~255, corresponding to the

laser output power from 0~100% (the actual laser power may not be strictly linear with the setting value). The relationship between PIN value and output power is shown in Table 4:

Table 4 Definition of power control PIN value

	Setting 1	Setting 2	Setting 3	Setting 4	Setting 5
PIN 1	0	0	0	0	1
PIN 2	0	0	0	0	1
PIN 3	0	0	0	0	1
PIN 4	0	0	0	0	1
PIN 5	0	0	0	1	1
PIN 6	0	0	1	1	1
PIN 7	0	1	1	1	1
PIN 8	1	1	1	1	1
Current	~50 %	~75 %	~87.5 %	~93.75 %	100%

- 2) Alarms status: Pins 11, 12, 16 and 21 are the alarm and status outputs. Pin 12 is reserved (always be high). These pins indicate the following device states.

Table 5 Definition of alarm signal

PIN 12	PIN 11	PIN 16	PIN 21	Alarm item
×	Low	Low	Low	Temperature alarm
×	Low	Low	High	Normal
×	Low	High	Low	Obligate alarm
×	Low	High	High	System alarm
×	High	Low	Low	Supply voltage alarm
×	High	Low	High	Obligate alarm
×	High	High	Low	Obligate alarm
×	High	High	High	Obligate alarm

- 3) PIN 17 is the external 5V input, providing power supply for alarm signal; input current must be > 20 mA.
- 4) External input signals (PIN 1-8, 18-20, 22) are all connected to the optical coupler inside the system. External 17 pin 5V power supply should be connected to ensure the effective signal. Caution: Before turning on PIN 19, PIN 18 must be switched on, or the laser may be damaged. The signal of PIN 18 must be ahead of PIN 19 at least 5 ms.

- 5) I/O connection of digital signal: the supply current of input signals are less than 10mA, and the supply current of output signals are less than 3 mA. The connection circuit of input and output signals is shown in Figure 6.

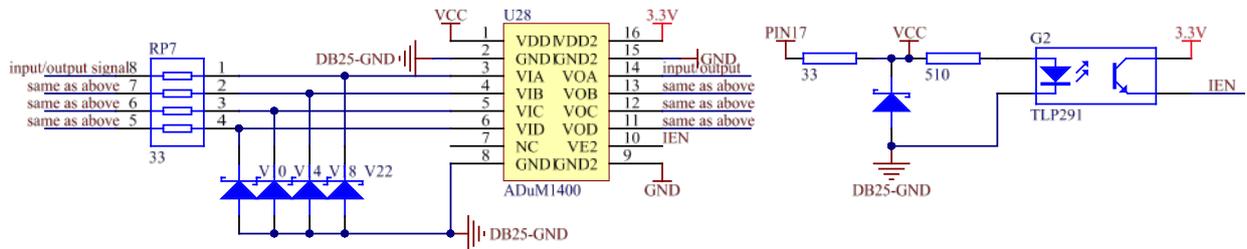


Figure 6. Schematic of input and output signals.

- 6) The control board and laser driver can be powered separately. When there is failure in 24V control board power supply, the laser will stop emission after 20 ms. When there is failure in 24V laser driver power supply, the laser will stop emission after 4 ms.

4. Operation Regulations

4.1 Pre-inspection

- 1) Make sure the device appearance is in good condition and the output fiber is neither excessively bended nor broken.
- 2) Make sure signal line of laser and marking system are properly connected.

4.2 Operation procedures

1) Starting procedures

Please make sure the control system is on before you turn on the fiber laser. Only after at least 1 minute since the power turned on, the subsequent operations can be preceded.

2) Frequency set introductions

For model P70Q, the frequency setting range is from 20 kHz to 100 kHz.

For model P100Q, the frequency setting range is from 20 kHz to 200 kHz.

3) Laser marking checking

For the device initial testing, first turn the power down to zero without turning on the marking system after the device is successfully started. Then draw a quadrature, marking continuously while slowly increasing the power from zero to 100% at the same time. Meanwhile, use a ceramic material to observe the laser and the laser should become stronger, otherwise shut down the device and check. If operating normally, the marking system can be used in common order afterwards.

4.3 Cautions

- 1) Marking frequency must be in the range of 20~100 kHz for P70Q, 20~200 kHz for P100Q.
- 2) It should not modulate the frequency while marking.
- 3) Stop marking first before shutting down the device, then turn the power down to zero and cut the power off.

5. Instructions for warranty, return and maintenance

5.1 General warranty

All products are warranted by Raycus against defects and problems in materials and workmanship during the warranty period according to the purchase order or specifications and we guarantee the product will accord with the specification under normal use.

Raycus has the right to choose to repair or replace any product that proves to be defective in materials and workmanship selectively during the warranty period. Only products with particular defects are under warranty. Raycus reserves the right to issue a credit note for any defective products produced in normal conditions.

5.2 Limitations of warranty

The warranty does not cover the maintenance or reimbursement of our product of which the problem results from tampering, disassembling, misuse, accident, modification, unsuitable physical or operating environment, improper maintenance, damages due to excessive use or not following the instructions caused by those who are not from Raycus. Customer has the responsibility to understand and follow this instruction to use the device. Any damage caused by fault operating is not warranted. Accessories and fiber connectors are excluded in this warranty. According to the warranty, client should write to us within 31days since the defect is discovered. This warranty does not involve any other party, including specified buyer, end-user or customer and any parts, equipment or other products produced by other companies.

5.3 Service and repairs

Raycus is responsible for all the maintenance, for there is no accessory available inside for users to use. Please contact Raycus as soon as possible when problems under warranty about maintenance happen to the product. The product returned with permission should be placed in a suitable container. If any damage happens to the product, please notify the carrier in document immediately.

All the items about warranty and service above provided by Raycus are for uses' reference, formal contents about warranty and service are subject to the contract.